

Instructions for use - chair OKLAHOMA PDH



The chair is equipped with a gas piston operated by a lever located on the right under the seat cushion (A). By tilting the lever in the upward direction, the piston is released and can be moved along its entire length. When you release the lever to its original position, the piston is locked.

The second lever, located on the left under the seat cushion (B), adjusts the back and seat angles simultaneously. Pulling the lever in the upward direction releases the back cushion, but only after the back cushion contacts the user's back (antishock system). After moving the lever back to its original position, the back cushion is locked in the nearest position.

There is a circular control knob on the back side of the back cushion (C), which is used to adjust the extrusion of lumbar support. By turning to the left, the lumbar support is extruded and vice-versa. The height of lumbar support can be adjusted manually by simply sliding it.

Adjusting the angle of the headrest can be achieved by grasping it and manually adjusting to the desired angle. The height adjustment can be achieved by pressing and holding the button (D), there are 2 possible positions. The headrest is locked after releasing the button.



The chair is equipped with vertically and horizontally adjustable armrests. The height of armrest can be adjusted by unlocking the control element (F) located on the side of the armrest. After setting the desired position, release the control element and the armrest locks in the nearest position. The horizontal adjustment can be made by releasing the plastic armrest grip (G). The head is tightened firmly in the desired position. Adjusting the tilt tension is achieved by turning the screw (H) under the seat - tightening increases the tension, loosening reduces it.

Maintenance instructions

Upholstery maintenance is performed by wiping dirt with a damp cloth with soapy water. It is recommended to check tightening of all screws every 3 months.

The chair is intended for sitting in one-shift operation in common office environment. The warranty period is 24 months and it is valid only for the abovementioned use. During the warranty period, the manufacturer will replace, free of charge, any parts that have been damaged due to defects in materials or due to manufacturing errors. The manufacturer replaces defective parts, not the whole chairs. The warranty does not cover damages caused by:

- Transportation (these damages are responsibility of the carrier)
- Incorrect assembly
- Not respecting the maintenance instructions
- Natural disasters
- Careless use

UPHOLSTERY: fabric 100% polyester, mesh 100% polyester

We believe that you will be satisfied with our product.

ANTARES a.s.



The picture symbol means that the product should not be treated as household waste. The product contains following materials: plastic, metal, wood, PUR foam. Take the product to a recycling site (e.g. collection point). For more information about recycling of this product, please contact your city office, your household waste disposal service or the point of sale where you purchased the product.